

WASHING:

Hand wash with a sponge, using a mild soap. Never use detergents or washing machines as they may damage the coating or seams. remember to use seam sealer once tent had been washed to insure waterproofing.

HOW LONG WILL A NYLON TENT LAST?

Various conditions will affect the length of service which you receive:

- a. A nylon tent which is left erected all summer may last only one or two seasons, as the sun's ultra-violet rays damage the nylon.
- b. Never store a tent wet or damp, as mildew may develop. It will not harm nylon, however, mildew is unsightly and may damage other parts of the tent (i.e. zipper tapes).
- c. Avoid spraying insect repellent or hair sprays, etc. on tent fabric as they may be harmful.

REPAIR:

For small tears use a an adhesive backed rip-stop nylon patch. We recommend Texsport Nylon Tent Repair Kit which may be found at your local outdoor outfitter or camping store.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402** or e-mail **info@texsport.com**. This Department is open M-F from 8 a.m.-5 p.m. CST.



INSTRUCTIONS


Item 01165 Saguaro Bivy Shelter Tent

Thank you for purchasing this Texsport tent. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tent and that it will give you many years of camping pleasure.

Do not apply excessive force to this product.

PARTS LIST:

- AFront arch pole**
- B.....Rear arch pole**
- C.....Rainfly**
- DTent skin**
- EGuy ropes, clews and stakes**

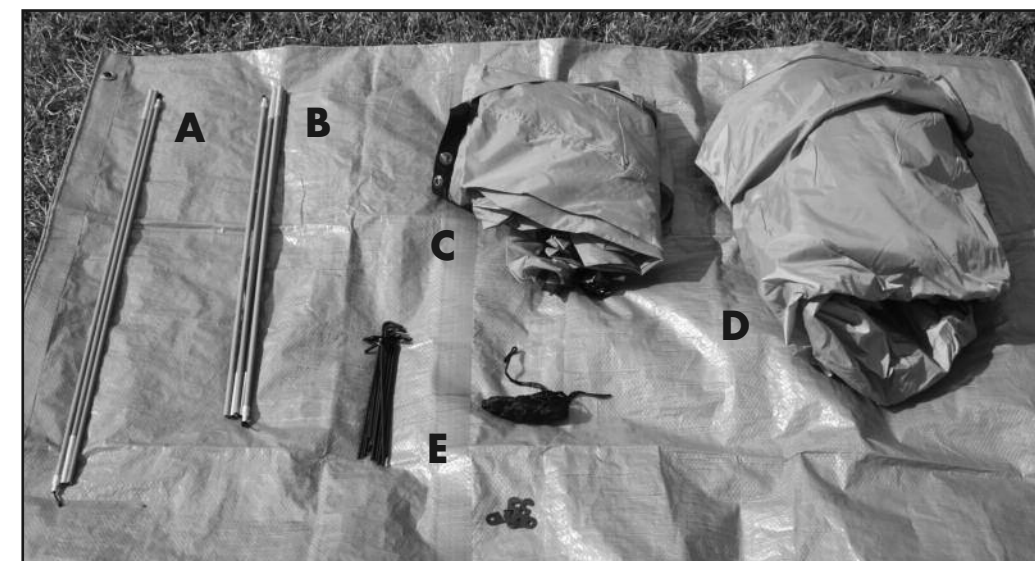**NOTE:**

Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.



STEP 1 - Spread out the tent skin



STEP 2 - Assemble the front arch pole (A) and insert through tent sleeve.



STEP 3 - Insert the front tent pole into the first grommet on the web tabs on each side.


**MODEL: SAGUARO BIVY
SHELTER TENT
ITEM 01165
MADE IN CHINA
EMC10**



STEP 4 - This is what the front arch of your tent should look like. It will not stand up by itself at this point. Lay it down to continue.



STEP 5 - Assemble the rear arch pole (B) and insert into the first grommet on the web tabs on each side.

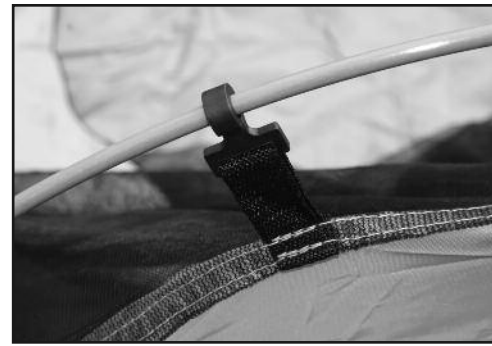

STEP 6 - Attach the speed clips to the pole.



STEP 13 - Stake out the front tabs so the front arch pole stands up.




STEP 14 - This is what your tent should look like.




STEP 15 - Drape the fly over the tent and stake down at all tabs to secure.




STEP 7 - This is what the rear arch of your tent should look like. It will not stand up by itself until it is guy roped.

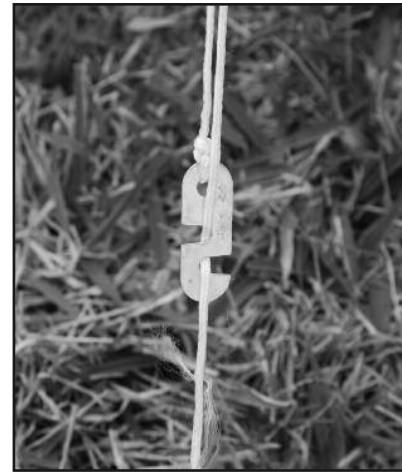

STEP 8 - Insert the guy rope through the hole in the clew and tie a knot.

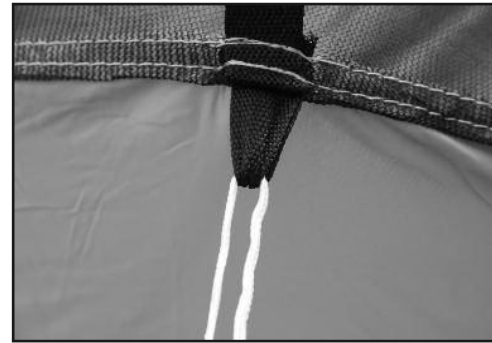

STEP 9 - Run the clew and guy rope through the tab at the rear of the tent.

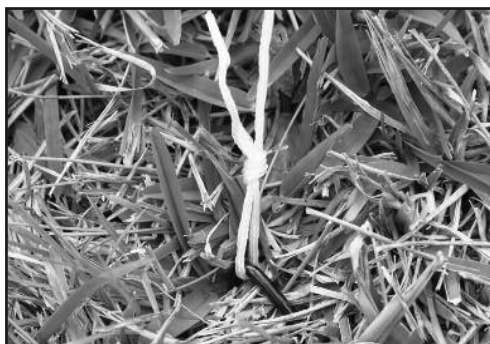

STEP 10 - On the other end of the guy rope, tie a knot to loop around a stake. Stake down as shown above.



STEP 11 - Slide the clew up or down to adjust the tension of the guy rope to stand up the rear arch pole.



STEP 12 - Stake out the tent into the second grommet at all web tabs.

WARNING:

Texsport tent fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that NO OPEN FLAME BE USED IN OR NEAR YOUR TENT.

SOME ADDITIONAL INFORMATION:

Make sure you stake the tent (with the tent stakes included) in windy weather, or if you anticipate afternoon winds coming up while you are away from your campsite. Stake one corner, then stake each consecutive corner in a clockwise rotation. Make sure the tent remains tight. Always place your tent a safe distance from your campfire - unstaked tent placed upwind of the fire can be blown into the fire. Tent placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your tent.

WATERPROOFING YOUR TENT:

Texsport tents are made from coated water-repellent fabrics. However, the sewing process, necessary in all tent fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the tent will leak. Every new tent needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store.

TENT STAKES:

All tents should be staked down. The stakes supplied with your tent are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand Stakes:Long broad stakes designed to hold in loose sand.
- b. Steel Stakes:Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damagethe tent if stored with the tent. In extremely hard soil a steel rod can be used to makethe starter hole.
- c. Skewer Stakes:Lightweight, but less holding power than the standard stakes.
- d. Snow Stakes:The most common method is to bury objects with a great deal of surface area in the snow i.e.branches, aluminum pie plates, stuff sacks or tent bags filled with snow and buried: (thismay be referred to as the dead man method). Tents can also be secured to snow skis orpoles which are stuck into the snow.

ZIPPERS:

If zippers stick, lubricate with silicone. Never force a zipper which has material caught in it, as this will bend the slider and prevent the zipper from closing. Continual use in a sandy environment can cause the slider to erode and fail to close the zipper.

STORAGE:

Tents should be stored dry and loosely folded, away from heat and water. Keep out of reach of mice as they like to nest in tents. Never store directly on concrete, as moisture and chemicals in concrete may damage the nylon.