



Authentic Adventure Gear®

INSTRUCTIONS

Item 01700


Phoenix Three-Season Tent

Thank you for purchasing this Texsport tent. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tent and that it will give you many years of camping pleasure.

Do not apply excessive force to this product.

PARTS LIST:

- ATent Skin**
- B.....Rainfly**
- C.....2 Long Shock-corded
Fiberglass poles**
- D1 Short Shock-corded
Fiberglass poles**
- E.....Stakes**

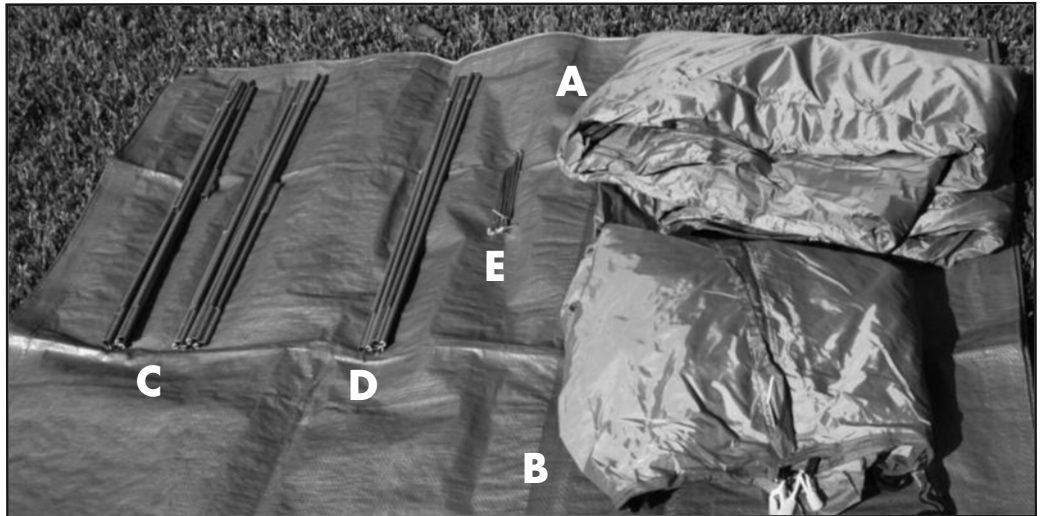

NOTE:

Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.



STEP 1 - Spread out the tent skin and assemble the poles.



STEP 2 - Push the 2 long poles into the criss-cross sleeve sections of the tent skin. This is what your tent should look like without the rainfly.



STEP 3 - Tie the back poles to tent skin to secure.



STEP 4 - Push the short pole through the remaining sleeve in the front of the tent.



STEP 5 - Tie the front pole at the sides to secure to the tent skin.



STEP 6 - Insert the pins into the bottom of the 2 long poles first. Then the short pole. In this order, it is easier to stretch the tent skin. Stake down at all 6 corners.



STEP 7 - Attaching the rain fly: To make it easier; match up the doors on the fly with the doors on the tent and drape over tent.



STEP 8 - To secure the rain fly, attach the hooks onto the rings.