



ASSEMBLY INSTRUCTIONS

Item 02845 - Wendover Screen Arbor

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new arbor and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the arbor.

Do not apply excessive force to this product.

PARTS LIST:

DESCRIPTIONQTY.PART NO.

Gray Center Roof Joints2 EA.	
White corner Roof Joints4 EA.	
Screen Arbor Skin1 EA.	
Plastic Stakes12 EA.	
Steel Roof Poles4 EA.#1
Steel Roof Poles4 EA.#2
Steel Roof Poles4 EA.#3
Steel Eaves Poles8 EA.#4
Steel Eaves Poles4 EA.#5
Steel Eaves Poles2 EA.#6
Steel Leg Poles4 EA.#7
Steel Leg Poles4 EA.#8
Steel Peak Poles1 EA.#9
Steel Poles with Plastic Rings2 EA.#10
Steel Poles with Plastic Rings2 EA.#11

ASSEMBLY INSTRUCTIONS

- Step 1 ..Connect #10 and #11 poles together. Insert #9 pole through both #10 poles. Put on gray center roof joint.
- Step 2 ..Put #6 poles through #11 poles.
- Step 3 ..Connect #1, #2, and #3 poles to center roof joints. Put white corner joints on the end of #3 poles.
- Step 4 ..Connect #4, #5, and #4 poles, and #4, #5, #6 and #4 poles. Connect pole sections to the corner joints as illustrated in Fig. 1.
- Step 5 ..Connect #7 poles to corner joints
- Step 6 ..Pull arbor skin over frame, then connect #8 poles to #7 poles.
- Step 7 ..Pull arbor skin tight over frame and secure inside with velcro straps. Then connect T-clips to holes in #8 poles and attach foot pads to #8 poles.
- Step 8 ..Secure arbor to the ground using the included guy ropes and clews. Instructions on reverse.

SOME ADDITIONAL INFORMATION:

Make sure you stake the shelter (with the stakes included) in windy weather, or if you anticipate afternoon winds coming up while you are away from your campsite. Stake one corner, then stake each consecutive corner in a clockwise rations. After staking the corners return and stake any other stake loop positions if applicable. Always place your shelter a safe distance from your campfire - unstaked shelters placed upwind of the fire can be blown into the fire.

Please see reverse side for more valuable information

 
 
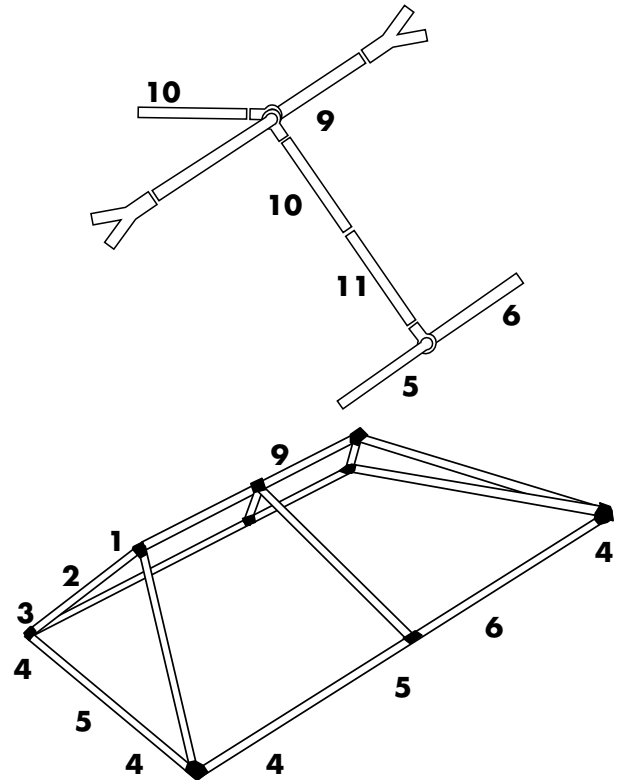 


Fig. 1

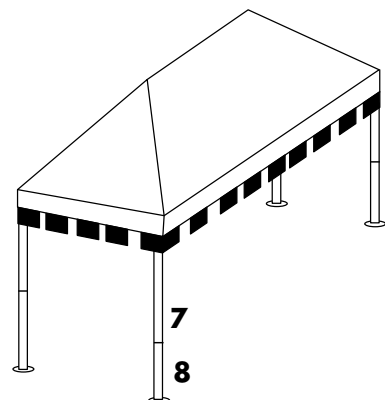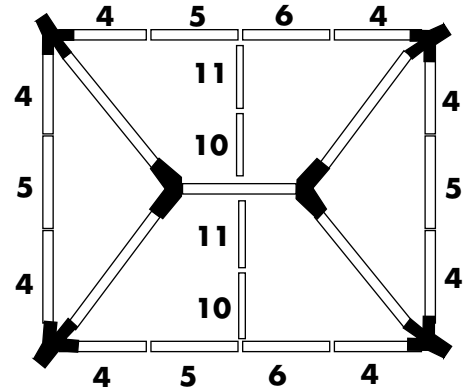

Shelters placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your shelter. The frame system on this shelter was designed to collapse during high winds. By collapsing in the wind the frame will not break, offering you years of continued use. We recommend that you practice setting your shelter at home before taking it into the wilderness.

WATERPROOFING YOUR SHELTER:

Texsport shelters are made from coated water-repellent fabrics. However, the sewing process, necessary in all shelter fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the shelter will leak. Every new shelter needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store.

SHELTER STAKES:

All shelters should be staked down. The stakes supplied with your shelter are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand stakes: Long broad stakes designed to hold in loose sand
- b. Steel stakes: Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damage the shelter if stored with the shelter. In extremely hard soil a steel rod can be used to make the starter hole.
- c. Skewer stakes: Lightweight, but less holding power than the standard stakes
- d. Snow stakes: The most common method is to bury objects with a great deal of surface area in the snow (i.e. branches, aluminum pie plates, stuff sacks or shelter bags filled with snow and buried: (this may be referred to as the dead man method). Shelters can also be secured to snow skis, or poles which are stuck into the snow.

STORAGE:

Shelters should be stored dry and loosely folded, away from heat. Keep out of reach of mice as they like to nest in shelters. Never store directly on concrete, as moisture and chemicals in the concrete may damage the nylon.

WASHING:

Hand wash with a sponge, using soap such as Ivory Flakes. Never use detergent or washing machines as they may damage the coating or seams.

HOW LONG WILL A NYLON SHELTER LAST?

Various conditions will affect the length of service which you receive:

- a. A nylon shelter which is left erected all summer may last only one or two seasons, as the sun's ultra-violet rays damage nylon under continual exposure.
- b. Never store a shelter wet or damp, as mildew may develop. It will not harm nylon, however, mildew is unsightly and may damage other parts of the shelter (i.e. zipper tapes).
- c. Avoid spraying insect repellent or hair sprays, etc. on shelter fabric as they may be harmful.

REPAIR:

- Adhesive-backed rip-stop tape is recommended for repairing tears.
- Small holes can be sealed using nylon seam sealant.

WARNING:

Texsport shelter fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that **NO OPEN FLAME BE USED IN OR NEAR YOUR SHELTER.**

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402**. This Department is open M-F from 8 a.m.-5 p.m. CST. www.texsport.com



GUY ROPE INSTRUCTIONS

Item 02844 - Amesbury Arbor

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new tent and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the tent.

ASSEMBLY INSTRUCTIONS

STEP 1. . . Tie a loop with a knot to fit over the pin on the top of the pole system or tie the rope to a "D" ring, depending on which product you have.

STEP 2. . . Tie the other end of the rope to the metal clew.

STEP 3. . . Loop the guy rope around the stake and inter-twine the clew and guy rope. Make sure you have tension on the guy rope after you are done. If there is not enough tension, just slide the clew up the guy rope towards the top of the pole or "D" ring to tighten.

QUESTIONS:

If you should have any questions, problems, or comments please call our Customer Service Department at 1-800-231-1402. This Department is open M-F from 8:00 a.m. until 5:00 p.m. CST.

