



Authentic Adventure Gear®

INSTRUCTIONS

Item 02906

Wayford Screen Arbor

Thank you for purchasing this Texsport screen arbor. Please read and understand each step of the set-up instructions. We encourage you to set-up this screen arbor at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new screen arbor and that it will give you many years of camping pleasure.

Do not apply excessive force to this product.

PARTS LIST:

- A1 screen arbor skin**
- B2 Long shock-corded roof poles**
- C4 Chain-corded legs**
- D1 Short shock-corded, rubber end roof pole**
- EGuy ropes, clews and stakes**



NOTE:

Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.



STEP 1 - Spread out screen arbor skin.



STEP 2 - Assemble the 2 long roof poles (B), and insert into the roof sleeves.



STEP 3 - Insert the roof poles into the molded corner joints.



STEP 4 - Assemble the short rubber end, roof poles (D), and insert into the roof sleeves.



STEP 5 - Insert rubber end of pole into the web pocket to secure.



STEP 6 - Tie all poles together to secure poles to arbor skin.



STEP 7 - This is what your arbor roof should look like.



STEP 8 - Assemble the leg poles (C) and insert into the molded corner joint.




STEP 9 - Snap on speed clips onto the leg poles.



STEP 10 - Insert the pin and ring into the leg poles.



STEP 11 - Stake down at all pin and rings.

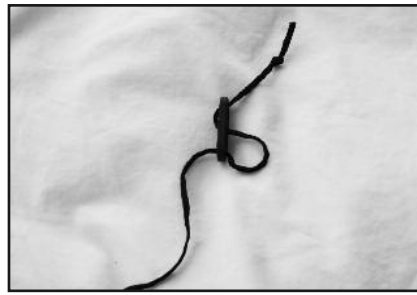

STEP 10 - It is recommended in windy weather to secure your screen arbor with guy ropes. Insert the guy rope into clew as shown above.



STEP 11 - Tie the guy ropes to the tabs on the screen arbor



STEP 12 - Loosen the guy rope as shown to wrap around a stake.



STEP 13 - Stake down guy rope.



STEP 14 - Adjust the tension on the guy rope by sliding the clew up or down.



STEP 15 -Your assembled screen arbor is now ready.

WARNING:

Texsport screen arbor fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that NO OPEN FLAME BE USED IN OR NEAR YOUR screen arbor.

SOME ADDITIONAL INFORMATION:

Make sure you stake the screen arbor (with the screen arbor stakes included) in windy weather, or if you anticipate afternoon winds coming up while you are away from your campsite. Stake one corner, then stake each consecutive corner in a clockwise rotation. Make sure the screen arbor remains tight. Always place your screen arbor a safe distance from your campfire - unstaked screen arbor placed upwind of the fire can be blown into the fire. screen arbor placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your screen arbor.

WATERPROOFING YOUR SCREEN ARBOR:

Texsport screen arbors are made from coated water-repellent fabrics. However, the sewing process, necessary in all screen arbor fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the screen arbor will leak. Every new screen arbor needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store.

screen arbor STAKES:

All screen arbors should be staked down. The stakes supplied with your screen arbor are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand Stakes:Long broad stakes designed to hold in loose sand.
- b. Steel Stakes:Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damage the screen arbor if stored with the diningcanopy. In extremely hard soil a steel rod can be used to make the starter hole.
- c. Skewer Stakes:.....Lightweight, but less holding power that the standard stakes.
- d. Snow Stakes:The most common method is to bury objects with a great deal of surface area in the snow i.e. branches, aluminum pie plates, stuff sacksor screen arbor bags filled with snow and buried: (this may be referred to as the dead man method). screen arbors can also be secured to snow skis or poles which are stuck into the snow.

ZIPPERS:

If zippers stick, lubricate with silicone. Never force a zipper which has material caught in it, as this will bend the slider and prevent the zipper from closing. Continual use in a sandy environment can cause the slider to erode and fail to close the zipper.

STORAGE:

screen arbors should be stored dry and loosely folded, away from heat and water. Keep out of reach of mice as they like to nest in screen arbors. Never store directly on concrete, as moisture and chemicals in concrete may damage the nylon.

WASHING:

Hand wash with a sponge, using a mild soap. Never use detergents or washing machines as they may damage the coating or seams. remember to use seam sealer once screen arbor had been washed to insure waterproofing.

HOW LONG WILL A NYLON SCREEN ARBOR LAST?

Various conditions will affect the length of service which you receive:

- a. A nylon screen arbor which is left erected all summer may last only one or two seasons, as the sun's ultra-violet rays damage the nylon.
- b. Never store a screen arbor wet or damp, as mildew may develop. It will not harm nylon, however, mildew is unsightly and may damage other parts of the screen arbor (i.e. zipper tapes).
- c. Avoid spraying insect repellent or hair sprays, etc. on screen arbor fabric as they may be harmful.

REPAIR:

For small tears use a an adhesive backed rip-stop nylon patch. We recommend Texsport Nylon screen arbor Repair Kit which may be found at your local outdoor outfit-ter or camping store.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402** or e-mail **info@texsport.com**. This Department is open M-F from 8 a.m.-5 p.m. CST.