




INSTRUCTIONS

Item 15116 - Swivel Grill

Thank you for purchasing this Texsport swivel grill. Please read and understand each step of the set-up instructions. We encourage you to set-up this swivel grill at least once prior to your outdoor trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new swivel grill and that it will give you many years of outdoor pleasure.

PARTS LIST:

- ASwivel Grill**
- BLevel Toggle**
- CStake**

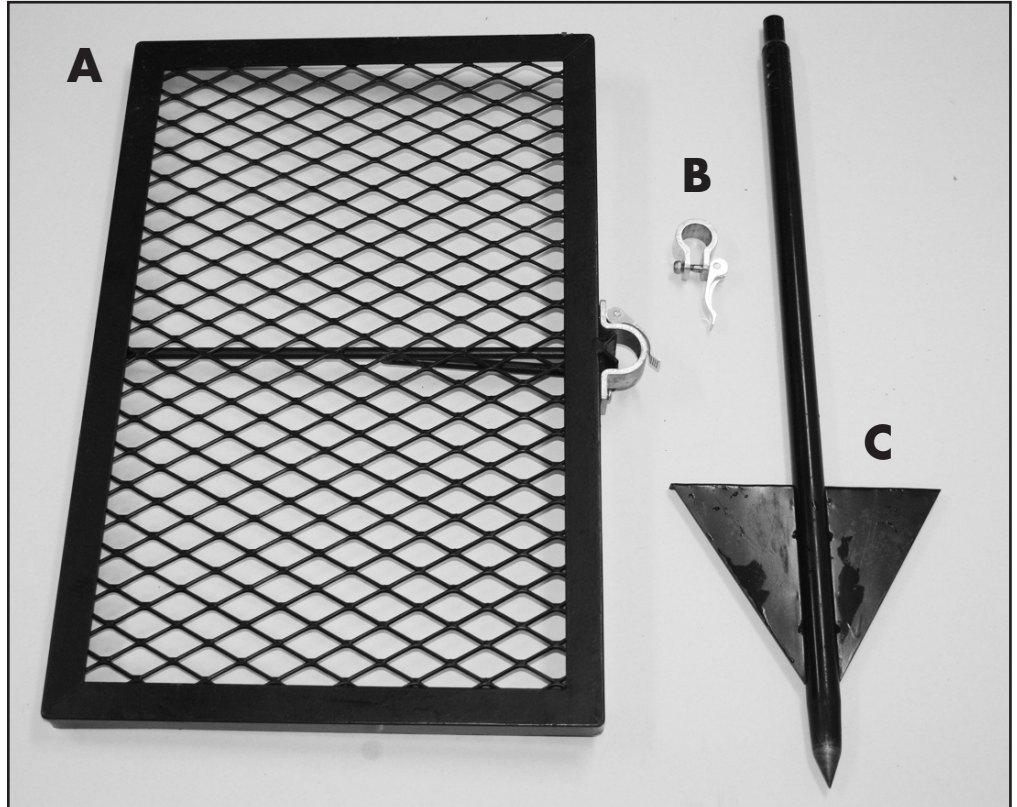


NOTE: BE CAREFUL ADJUSTING THE GRILL - PARTS MAY BECOME HOT WHILE COOKING



STEP 1 - Find a safe and clear area where you are going to set-up your camp fire.

Insert the grill stake into solid ground.

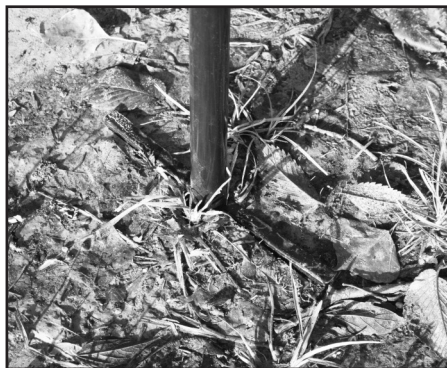

STEP 2 - To make certain your swivel grill is secure and stable, make sure the grill stake is level and in solid ground.



STEP 3 - Slide level toggle over grill stake and lock at the desired level by closing toggle.



STEP 4 - Slide the swivel grill onto the grill stake. It should rest on top of the level toggle. Lock into place by closing toggle



STEP 5 - This is how your swivel grill should look when built.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.