

INSTRUCTIONS

#23118 - Battery Air Pump



Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new pump and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step prior to working with the pump.

IMPORTANT: This pump is intended to inflate items such as air beds and inflatable toys, etc. Use for pneumatic items such as tires or inflatable sport balls is not recommended. Do not operate under wet conditions.

WARNING:

Never attempt to disassemble, open or close the pump when in use.

Do not allow children to use pump unattended.

Do not allow debris to get sucked into the inflation or deflation ports.

TO INFLATE:

Step 1 Open valve/stopper on inflatable item.

Step 2 Attach one of the three adapters to the "inflate" end of the pump.

Step 3 Insert pump into inflatable and turn pump on by moving switch to the ON "—" position. To turn pump off, move the switch to the OFF "o" position.

Step 4 When fully inflated, remove pump and close valve/stopper on inflatable item.

TO DEFLATE:

Step 1 Remove adapter from "inflate" end and attach to the "deflate" end of the pump. Repeat same steps as inflating.

Questions: If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.