

IMPORTANT

Read this manual carefully before assembling, using or servicing this heater.
Keep this manual for future reference.

FOR YOUR SAFETY - IF YOU SMELL GAS

- Do not attempt to light the appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- If smell persists leave the area.

! DANGER !

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

! WARNING !

Misuse of this heater can lead to fire, explosion and serious Personal injury to you or others. Follow all instructions provided.

CONTACT INFORMATION

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402.
This Department is open from 8 AM-5 PM CST. M-F. www.texsport.com.

DANGER

NEVER USE THIS APPLIANCE IN AN ENCLOSED SPACE SUCH AS CAMPER, TENT, CAR OR HOME.

USING IT IN AN ENCLOSED SPACE CAN KILL YOU.

USE OUTDOORS ONLY!



1. Steel Reflector
2. Nickel plated grid
3. Heating element/ burner
4. Temperature sensor
5. Adjustable heat control valve
6. Gas release button
7. Auto shut-off valve
8. Plastic paddlefoot base
9. Disposable propane cylinder

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new propane appliance and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this propane appliance.

FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION

- NEVER use in an enclosed area.
- DO NOT use heater while sleeping.
- Always use heater in the upright position.
- Always use handle to move heater.
- DO NOT expose the propane cylinder to excessive heat.
- Always return handle to “down” position after lighting or moving. If handle is left in the “up” position during operation it will become very hot and should not be touched for at least 15 minutes after shut off.
- Never operate heater with missing or damaged parts or mantles.
- Always inspect heater, propane cylinder and connections for damage, debris or dirt before attaching the heater to the propane cylinder.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the heater is cool.
- When storing or transporting heater, always disconnect the propane cylinder and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane cylinder is tightly secure (hand tighten only) prior to each use.
- Never operate the heater near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel of this booklet.
- Discontinue operation and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Never leave heater unattended when hot or in use.
- KEEP OUT OF REACH OF CHILDREN.

NOTE: AN IMPACT TO THE REGULATOR AREA COULD DAMAGE THE REGULATOR AND FAIL TO LIGHT CORRECTLY, RESULTING IN MELTING PARTS.

HEATER ASSEMBLY – ASSEMBLE OUTDOORS

Step 1. Use only the approved 16.4 oz/465 g disposable propane cylinder approved for use by the United States Department of Transportation DOT-NRC 232/290 M1110.

Step 2. Make sure that the burner control valve knobs are turned off. Twist in a clockwise direction.

Step 3. Please check all connections for leaks using soapy water. Bubbles will form if there is a leak present.

**DO YOU SMELL GAS? IF YES, THERE IS A LEAK.
IS THE CONNECTION AREA EXTREMELY COLD?
IF SO, THERE IS A LEAK
DO NOT USE HEATER IF IT IS LEAKING.
WHEN YOU ARE SURE THERE ARE NO LEAKS,
YOU MAY PROCEED TO SETUP/LIGHTING YOUR HEATER.**

Step 4 . When you are sure there are no leaks, you may proceed to setup/lighting your heater.

SETUP/LIGHTING YOUR HEATER

Step 1 . Turn the control valve knob counter clockwise to high. Press the gas release button and hold, gas will begin to flow.

Step 2 . Place a flame to the heating element.

Step 3 . Upon ignition, keep gas release button depressed for 60 seconds and then release. Heater should remain lit.

Step 4 . You may now regulate heater as you choose.

Step 5 . If heater fails to light, turn valve to off position, wait 60 seconds and repeat steps 1-4.

USING YOUR HEATER

Step 1 . After burner has ignited, adjust valve to desired heat level.

Step 2 . While ignited DO NOT touch the metal reflector or safety grid.

Step 3 . Keep children, pets and flammable materials well away from ignited burner. See clearance zone diagram of this booklet.

Step 4 . Heater surfaces are very hot and should not be handled or moved, except after being shut down.

Step 5 . Allow heater to cool for 15 minutes before storage.

MAINTENANCE

Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder.

**IF DAMAGED DO NOT USE THE APPLIANCE AND CONTACT
TEXSPORT CUSTOMER SERVICE AT
1-800-231-1402 8AM TO 5PM CST MON-FRI.**

**DO NOT PERFORM MAINTENANCE WHILE THE
HEATER IS STILL HOT. PLEASE ALLOW
ADEQUATE TIME TO COOL.**

MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLE

Please keep all combustible and/or flammable materials away from the heater at a minimum distance of 12" from the sides and 48" from above.



ONE YEAR LIMITED WARRANTY!

Texsport warrants to the original consumer purchaser that this heater is free from defects in materials and workmanship for a period of one (1) year from the date of purchase. All implied warranties relating to this product, including without limitation, the warranties of merchantability and fitness for a particular purchase, are also limited in duration to one (1) year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty extends to the original consumer purchaser only and does not extend to subsequent purchasers or other transferees. This warranty does not cover damage for wear and tear, abuse, improper use or alteration and it is the sole express warranty relating to this product. Call the Texsport Consumer Relations Department at 1-800-231-1402, a sales receipt with date of original purchase is required and must accompany the return of the defective product. **THERE IS HEREBY EXCLUDED FROM THIS WARRANTY ANY LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS RESULTING FROM ANY BREACH OF THIS WARRANTY OR OTHERWISE.** Some states do not allow the exclusion may not apply to you. This warranty gives you specific legal right, and you may also have other rights which vary from state to state.

#14215

NOTE: THIS IS NOT A WARRANTY REGISTRATION CARD