


Instructions:



1. Remove old shock-cord from pole section



2. Place washer on one end of shock cord and tie a knot to keep it from coming off




3. Attach other end of cord to uncoiled wire with tape (not included)



4. Make sure poles are in the correct order and pole ends with ferrules connect to pole ends without ferrules.

5. Insert wire with cord into pole. Take a pair of pliers and pushing with short strokes, guide the wire and cord through the connecting poles.

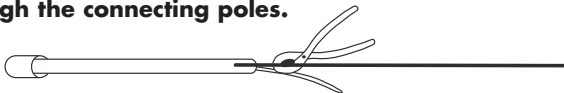

6. When cord is threaded through entire pole section, detach wire, slip washer onto shock cord then stretch cord about 6" out of pole and tie a knot behind the washer. Cut off excess cord.



7. Place original end caps over knots. Glue on with water-proof glue if necessary.

HOUSTON, TX 77255 USA
MADE IN CHINA
© 2010 TEXSPORT
www.texsport.com

ENJOY OUR PRODUCTS RESPONSIBLY



ITEM 14110



0 49794 14110 0